## Wall Mounted Touch Panel



## Model No.: T20. T20-1. T20-2. T20-3

1-4 Zone dimming switch/Glass touch panel/Wireless remote 30m distance/AAA x 2 battery



# 0 0 0

0

4 Zone switch

CE ROHS MMC LVD RED

## Features

- Touch panel 1/2/3/4 zone dimming switch RF remote.
- Each zone can remote control multiple our 2.4G LED controllers.
- Ultra sensitive high strength glass touch panel.
- Touch keys with chord tones and LED indicator.
- Free installation, no wiring, removable.
- AAA x 2 battery powered.

### Technical Parameters

 
Input and Output		Environment
Output signal	RF(2.4GHz)	Operation temperature
Working voltage	3VDC(AAA x 2)	Case temperature (Max.)
Working current	< 20mA	IP rating
Standby current	< 20µA	
Standby time	l year	
Remote distance	30m	Warranty
	1	Warranty
Safety and EMC		
EMC standard (EMC)	EN301 489,EN 62479	
Safety standard(LVD)	EN60950	Weight
Radio Equipment(RED)	EN300 328	Net weight
Certification	CE, EMC, LVD, RED	Gross weight

 
Environment	
Operation temperature	Ta: -30°C ~ +55°C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20

Warranty	
Narranty	5 years


Weight	
Netweight	0.160kg
Gross weight	0.190kg

## Mechanical Structures and Installations





Installation diagram:

 



86 size

Uninstall Touch panel

Baseplate

Base

European style


Typical base as below:

To fix the panel, two options are offered for selection:

Option 1: fix it on the wall with two screws.

Option 2: adhere it to the wall with paster.

## Key function

 

I - ON key

Short press: Turn on the light of each zone. Long press(1-6s): Dimming up when light is on.

#### 0 — OFF key

Short press: Turn off the light of each zone. Long press(1-6s): Dimming down when light is on. Long press(5s) : Turn on or turn off tone when light is off.

## Touch Panel work as RF remote (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key
Match:
Short press match key, immediately press ON

#### Use Power Restart

Delete:

#### į.,

Match: Switch off the power of the receiver, then switch on power again, immediately short press ON key 3 times on the touch panel.

Switch off the power of the receiver, then switch on power again, immediately short press ON key 5 times on the touch panel.

The light blinks 5 times means all matched remotes were deleted.

The light blinks 3 times means match is successful.

#### Delete:

key of the touch panel.

Press and hold match key for 5s to delete all match, The light blinks 5 times means all matched remotes were deleted.

## Safety information

- 1. Read all instructions carefully before you begin this installation.
- When installing battery, pay attention to the battery positive and negative polarity. A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.